



Accessories

10026904- UBIFAST Configuration Tool



General Data

Intro	The UBIFAST configuration tool is used to configure the various parameters available in our IXARC programmable encoders
Notes	Includes: Configuration Tool, Terminal Block Adapter & Power Supply
Config Functionality	<ul style="list-style-type: none"> - Compact housing with WLAN to create HOTSPOT - Connects to Smart Phone/ Tablets/ Notebooks - Web Browser based simple Programming - Configuration Data sent back to POSITAL via E-mail
Config Programable Interfaces	Incremental, SSI, SSI + Incremental , Analog



Config Programmable Parameters

Incremental
- PPR [1-16484]
- Output Driver [Push-Pull (HTL) or RS422 (TTL)]
- Counting Sequence

SSI
- Singleturn Resolution
- Number of Revolutions
- Output Code
- Preset Value
- SSI Direction

Analog
- Output Direction
- Analog Interface
0-10V or 0.5-9.5V
0-5V or 0.5-4.5V
- Measurement Range in Degree
- Preset Value

Contact



Contact Us

All dimension in [inch] mm. This drawing and the information contained is for general presentation purposes only. Please refer to the "Download" section for detailed technical drawings. © FRABA B.V., All rights reserved. We do not assume responsibility for technical inaccuracies or omissions. Specifications are subject to change without notice.